

Accessory Product sheet: Panel Lifting Devices

APPLICATION Computer / Equipment Room

ACCESS FLOOR Tascor® or Fibrecore
Access Floor Systems

SPECIFICATION DETAILS:

PRODUCT CODE DBLCUP 80 kg rating

PRODUCT CODE DBLCUP-BK 30 kg rating



Product Code
DBLCUP

Product Code
DBLCUP-BK

Tasman's double cup suction panel lifters allows panels to be lifted quickly, easily and safely without damaging any of the adjoining access floor panels.

EXCELLENT SAFETY FACTOR

Tasman's double cup suction panel lifter (product code DBLCUP) is certified with an 80kg rating. This ensures an excellent safety factor considering the heaviest Tasman panel weighs around 16kg.

SUITED TO ALL PANEL SURFACES

Tasman's panel lifters are designed for use on all Tasman access floor panels, including 'bare' and 'high pressure laminate' panel surfaces.

EASY TO USE

The Tasman DBLCUP panel lifters double suction cups are engaged/disengaged using the simple up/down toggles. This easy to use method ensures the panel is engaged/disengaged safely.

The Tasman DBLCUP-BK panel lifters double suction cups are a press down activation suction cup which instantly holds and supports the access floor tile. To release simply pull on trigger and suction is released.

HOW TO USE THE PANEL LIFTER

When underfloor access is required, only those panels directly over the area of work should be removed. To remove the first panel, place the panel lifter in the centre of the panel, secure both suction cups and lift vertically. The surrounding panels can then be removed by placing a hand under the panel and lifting.

CAUTION

A panel lifter must be used to remove the first access floor panel. Do not 'hinge' a panel open or attempt to prise it out with a screwdriver or similar device.

REMOVING ACCESS FLOOR PANELS USING PRODUCT CODE DBLCUP

To correctly remove access floor panels, follow these instructions:




1. Place panel lifter with 'tabs up' in the centre of the panel being lifted.



2. Create suction between panel lifter and panel.



3. Carefully lift panel vertically until it clears the access floor and place the panel flat in a clear space.

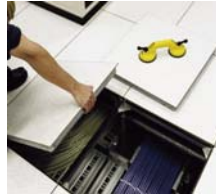

4. Remove adjoining panels by placing a hand under the panel and lifting.

Note: Always ensure at least one panel is engaged on the corner pedestal head of stringerless access floor systems. Otherwise the head may rotate and cause the re-installed panels to 'rock'.

RE-INSTALLING ACCESS FLOOR PANELS

To correctly re-install access floor panels, follow these instructions:



1. Make sure the panel lifter tabs are in the 'down' position.



2. Carefully lift and replace panel in position within access floor.

Note: Check to make sure all edges are flat against the existing access floor.



3. Remove panel lifter from panel by lifting tabs to the up position.